


pqi

產品說明書  
User Manual

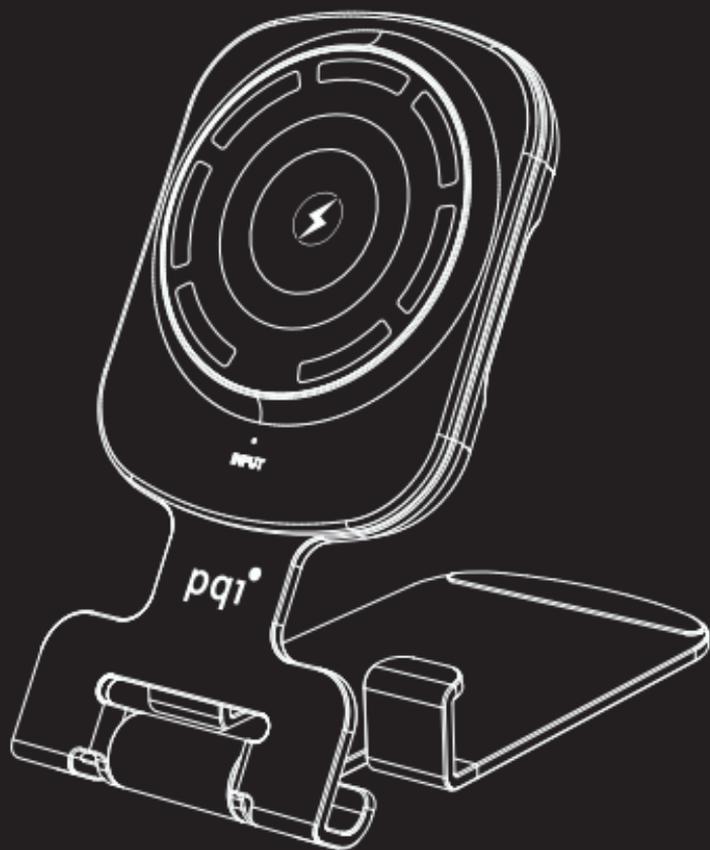

磁吸無線充電器  
Magnetic Wireless Charging Station

WCS15W

**使用本產品前請詳閱使用說明**



Please read the instructions  
before using the product.

## 產品介紹 | Product Introduction

磁吸充電面  
Magnetic charging surface


電源/充電指示燈  
Power/charging indicator light

轉軸  
Axis

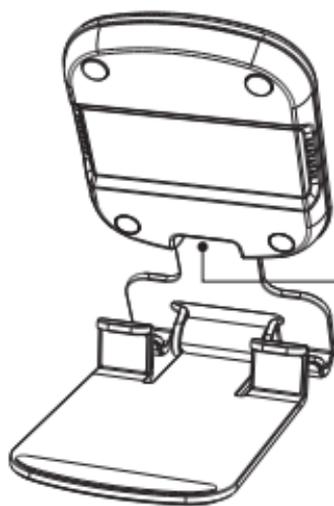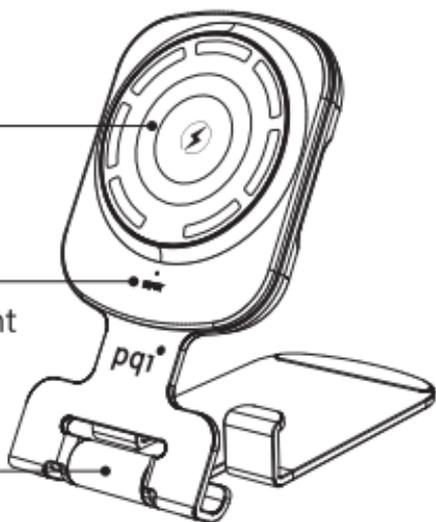

Type-C 充電接口  
Type-C charging port

## 使用說明 | Installation

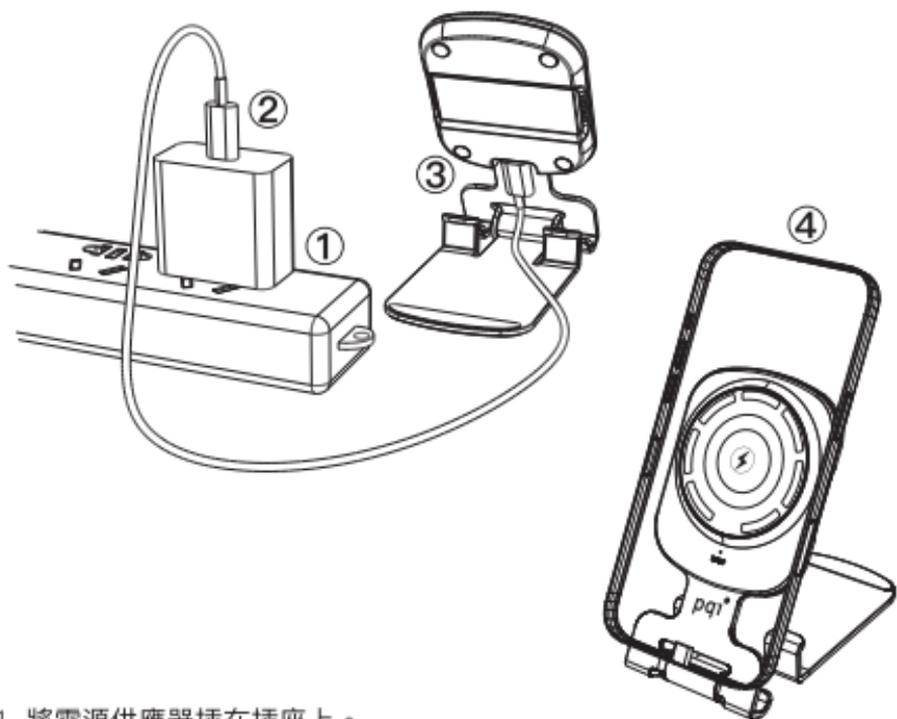


1. 將電源供應器插在插座上。
2. 將數據線插入電源供應器。
3. 將數據線插入無線充電架USB-C接口。
4. 將支援磁吸無線充電功能的手機正確放在無線充電板上，指示燈白燈常亮表示開始充電

1. Plug the charger into the socket.
2. Plug the USB cable into the charger.
3. Insert the USB cable into the USB-C interface of the wireless charging stand.
4. Put the mobile phone that supports the magnetic wireless charging function on the wireless charging board correctly, and the white light of the indicator light is always on, indicating that charging is started.

## 使用說明 | Installation

使用狀態一  
Utility Status 1

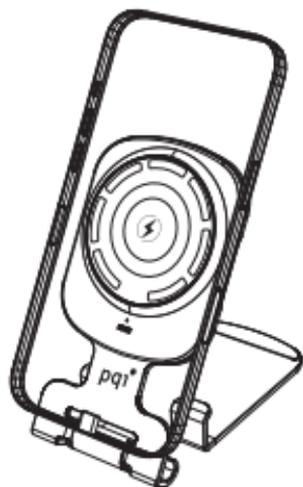

使用狀態二  
Utility Status 2

### 指示狀態與保護功能

### Indicating Status and Protection Function

待機：白燈常亮

通電狀態：白燈常亮

充電狀態：呼吸模式

FOD：白燈閃爍

Standby : white light is always on

Power on status : white light is always on



Charging status: breathing mode

FOD : white light flashing

## 注意事項 | Precautions

1. 請避免強烈摔打，碰撞此產品。
  2. 充電時請取下保護套以保持高效率。
  3. 請不要在通電狀態自行拆解或投入火中、水中，避免短路漏電。
  4. 請不要在嚴重高溫、潮濕或腐蝕性環境下使用，避免損壞電路出現漏電。
  5. 請不要將帶有磁條或帶有芯片的磁卡(身份證、金融卡等)放置在充電板上，避免造成磁卡失效。
  6. 請保持醫療設備(心律調節器、植入式助聽器等)和無線充電器之間距離至少間隔30cm，避免造成醫療設備的潛在干擾。
  7. 照顧好兒童，以確保他們不會將無線充電器當成玩具避免不必要的事故。
  8. 手機或其他相關設備最好不要設置振動模式，因為振動會導致偏差和影響充電體驗。
  9. 充電前請仔細閱讀說明書，本產品不能保證與所有機器的功能相容。
  10. 本產品需要配備PD2.0/3.0/AFC等正規認證充電器來適配。
  11. 手機背面不能帶有指環扣、增加手機厚度物品或金屬物件，有以上物體將影響手機無線充的使用和充電功率。
  12. 手機滿電後，請勿長時間放在充電器上，充電完成後請切斷充電器電源。
1. Please avoid strong beatings and collide with this product.
  2. Please remove the phone protective case when the device is charging, to keep high efficiency.
  3. Do not disassemble the charger or throw it into fire and water, to avoid causing a short circuit leakage.
  4. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
  5. Do not place stuff with magnetic strip or chip ( ID card, bank cards, etc. ) on wireless charging pad to avoid magnetic card failure.
  6. Please keep the distance at least 30 cm (1 ft.) between medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
  7. Please take care of the children and ensure they won't play the wireless charger as a toy, to avoid unnecessary accidents.
  8. It is better the mobile phones or other related machines don't set the vibration mode, as the vibration will cause deviation and affect the charging experience.
  9. Please read the instruction manual carefully before charging, this product cannot be ensured to be compatible with the functions of all the machines.
  10. Pay special attention to this product requires regular authentication chargers such as PD2.0/3.0/AFC to adapt.
  11. The back of the phone must not have a ring buckle or increase the thickness of the mobile phone or metal objects.
  12. After the phone is full charge, please do not connect it with the charger for a long time, Please cut off the power supply after finished charging.

## 基本規格參數 | Basic Specifications

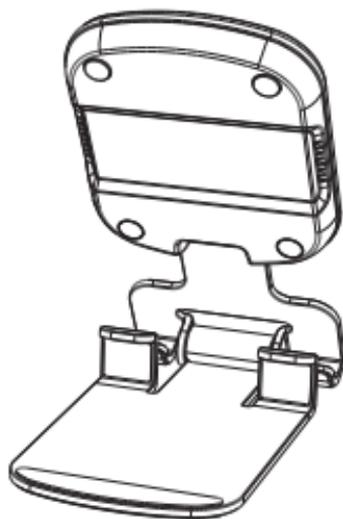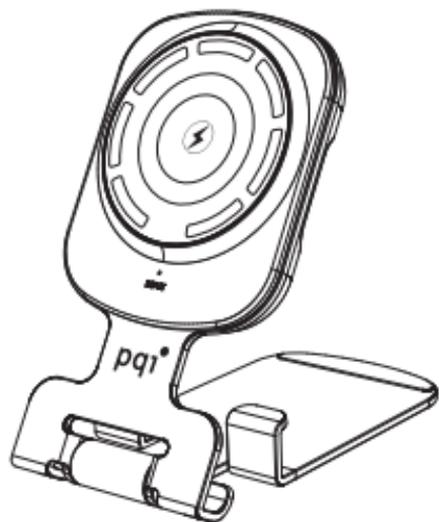

產品名稱：磁吸無線充電器

產品型號：WCS15W

輸入：5V,9V,12V=2A (MAX)

輸出：5V=1A；7.5V=1A；9V=1.12A；9V=1.66A (15W MAX)

操作溫度：0°C-35°C

外殼材質：PC/ABS/鋁合金

尺寸：128.5 X 22 X 70mm

重量：135g±3g | 產品保固：1年 | 產地：中國

Product Name : Magnetic Wireless Charging Station

Model : WCS15W

Input : 5V,9V,12V=2A (MAX)

Output : 5V=1A ; 7.5V=1A ; 9V=1.12A ; 9V=1.66A (15W MAX)

Operating temperature : 0°C-35°C

Shell Material : PC/ABS/Alufer

Size : 128.5 X 22 X 70mm

Weight : 135g±3g | Warranty : 1 Year | Made in China

設備名稱：磁吸無線充電器

Magnetic Wireless Charging Station

型號：WCS15W

限用物質及其化學符號

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
印刷電路板	○	○	○	○	○	○
電子零件	○	○	○	○	○	○
配件(數據線)	○	○	○	○	○	○
外殼(金屬)	○	○	○	—	○	○

備注1. “超出0.1 wt %”及“超出0.01 wt %”係指  
限用物質之百分比含量超出百分比含量基準值。

備注2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。

備注3. “—”係指該項限用物質為排除項目。

包裝內含物 | Package Contents

磁吸無線充電器 x 1、數據線 x 1

Magnetic Wireless Charging Station x 1、Cable x 1



取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

- ※ 支援iPhone 12以上機種及具有MagSafe充電功能的裝置，充電功率可能因裝置而有所不同。
- ※ 為保證磁吸充電性能，建議使用原廠MagSafe手機殼或是選擇帶有磁吸功能的手機殼。
- ※ 手機殼厚度需小於4mm。
  
- ※ Support iPhone 12 and above models and devices with MagSafe charging function, the charging power may vary depending on the device.
- ※ In order to ensure the magnetic charging performance, it is recommended to use the original MagSafe mobile phone case or choose a mobile phone case with magnetic suction function.
- ※ The thickness of the mobile phone case must be less than 4mm.

進口商/委製商：勁永國際股份有限公司

地址：23675新北市土城區中央路四段49號

Address : No. 49, Sec. 4, Zhongyang Rd., Tucheng Dist.,  
New Taipei City 23675, Taiwan

Tel : +886-2-2269-9889 | [www.pqigroup.com](http://www.pqigroup.com) | Facebook : PQI

[www.pqigroup.com](http://www.pqigroup.com)